

Pocket mini



INSTRUCTION MANUAL

Specification :

Size: 26*32*86mm
Display: OLED Display
Temperature Range: 400-580°F
Coil Resistance: >0.2Ω
Preheat: 10 Seconds
Session Timer: 15s-60s
Vibration Reminder: Yes
Charging Type: 5V/1A Type-C
Battery Capacity: 1300mAh
Charging Time: 1.5h



Pocket mini Exploded View :



Package Content :

- 1x Pocket mini (Cloud 2.1 Chamber Pre-installed)
- 1x Pick Tool
- 1x 4 Feet USB-C Cable
- 1x Instruction Manual
- 1x Owner's Manual
- 12x Terp Pearls
- 4x Q-tips

How To Use :

TO USE

1. Add Pearls And Concentrate :



Pull out the mouthpiece and fill the terp ball and concentrate into the Cloud 2.1 Chamber, then align the bottom of the mouthpiece with the device port and press firmly until fully seated with no visible gaps.

2. Turn on/off :



Quickly click the power button 5 times within 2 seconds.




yocanblack.com

Original and Exclusive Manufacturer:
Shenzhen Yocan Technology Co.,Ltd



3. Change Temperature :




Click power button 3 times to enter into Temperature Change Mode, click power button 1 time to increase by 5F.

4. Start Or Stop Session :



Click power button for 2 times to start preheating, device will vibrate once when start preheat and vibrate again when ready, dab time lasts 30 seconds. Device vibrate once when session finished.

5. Change Session Timer :

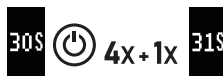

Click power button 4 times to enter into Session Timer Change Mode, click power button 1 time to increase by 1 second.

6. Reset Puff Counter :



Quickly click power button for 7 times.

7. Charging :

Type-C port, Fast charging not supported. Charging time around 1.5 hour.

TO CLEAN

1. Clean the Cloud 2.1 Chamber :



Clean the Cloud 2.1 Chamber after each use with a Q-tip, wipe gently in a circular motion while chamber is warm.

2. Quick Clean The Ceramic-Enhanced Airflow Mouthpiece :



Use the pick tool to gently pry open the silicone lid. Clean the ceramic-enhanced airflow mouthpiece with a Q-tip, wiping gently in a circular.

3. Disassemble The Ceramic Mouthpiece :



For deep cleaning, press the silicone lid inward until it becomes concave. Flip over the mouthpiece, remove the ceramic piece, and then remove the silicone lid.

4. Reassemble The Ceramic Mouthpiece :



Insert the ceramic piece back into the mouthpiece, flip it over, and reattach the silicone lid.

		Power On.
		Power OFF.
		Cloud 2.1 Chamber.
		Change Temperature.
		400-445°F 450-490°F 495-535°F 540-580°F
		Heating.
		Change Session Timer.
		Reset Puff Counter.
		Smoking Overtime Protection.
		Cloud 2.1 Chamber Not Connected. Short Circuit.
		No Sensor Error.
		Resistance <0.2Ω. Please Charge the Device.

Caution :

Keep the device away from any environment involving strong acids, alkaline, combustible materials, water, or any other liquids. Do not keep in hot cars or store above the room temperature of 74°F. Do not use damaged batteries. If the battery casing is damaged, discontinue use and safely recycle the battery. Do not use the battery if contacts become exposed to solid or liquid matter. Shorts can result in fire or an explosion of a battery. Do not touch coils when hot. Severe burns can result. Do not touch hot material. Severe burns can result. If the device gets too hot in use, please stop using it for a while. Not intended for tobacco or nicotine use. Not an ENDS device.

Disclaimers :

People under 21 years of age are not permitted to purchase or use this device. Non-smokers, children, and women breastfeeding should not use this product. The device is not a medical device and is not intended to diagnose, cure or prevent any diseases or other conditions. The manufacturers and sellers will not be responsible for any consequential or incidental damage resulting from the sale or use of any merchandise.